



GRFX-67C-CAM Dakota Digital GRFX Instrument Installation For 1967-'68 Chevrolet Camaro and Pontiac Firebird

Your new GRFX-67C-CAM kit includes:

GRFX Display



Universal Sender Pack

Foam Tape

Installation Manuals





BODIN
B

Control Box


Installation

1. Remove the original gauge cluster from the dash of the vehicle.




36" Main Harness

2. Remove the five screws holding the gauges to the bezel on the back of the system.

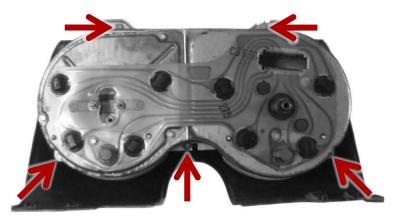

3. Remove the stock gauges and clear lens from the bezel.

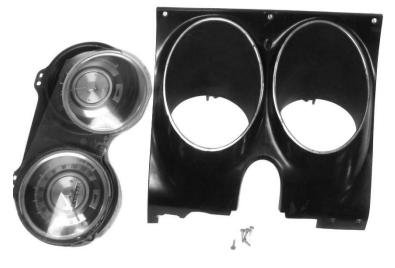

4. For this step, you can re-use the stock foam blocks or use the supplied **Foam Tape** to make replacements for missing or brittle foam pieces. Cut the foam tape into four small pieces, approximately 1.5" long.



On the top two locations, fold the foam over the edges and make sure it is not protruding into the visible window. In the bottom two corners, the gap for the foam tape is slightly narrower than the foam, ensure the foam is curved with the opening in the housing.

5. Mount the GRFX system to the bezel using the five original screws from disassembly.



6. Connect the provided **36**" **Main Harness** to the back of the GRFX system. Carefully route the open end of the main harness to the desired Control Box mounting location. If desired, a backup camera can also be connected to the provided RCA input.



8. Re-install the cluster into the vehicle and refer to the main manual for wiring instructions to complete the GRFX installation.



AWARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to <u>www.P65Warnings.ca.gov</u>



4510 W. 61st St. North Sioux Falls, SD 57107 www.dakotadigital.com dakotasupport@dakotadigital.com Phone (605) 332-6513 Fax (605) 339-4106

© Copyright 2024 - Dakota Digital